


Motorized Draperies

Trouble Shooting Guide (Cont.)

ISSUE	POSSIBLE CAUSE	SOLUTION/REPAIR
<p>The motor runs but the drapery will not open or close (cont.)</p>	<p>3. The wire cable tension is loose</p>	<p>Remove the motor and look up at the cable wires. If they are slack, tighten using the black bolt on the end of the motor assembly.</p>  <p>black bolt Check wiring</p>

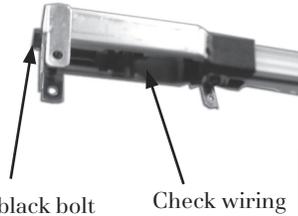

- Installation Instructions
- Operation Instructions
- Trouble Shooting Guide

Installation Notes

PROFESSIONAL INSTALLATION:

Professional installation is important with custom draperies. Pleated draperies will arrive folded, banded, covered in heavy-duty bags and boxed for shipping. For installation, draperies will need to be professionally dressed and steamed to look their best. A professional drapery installer may be found in the yellow pages or on the internet.

ROOMS WITH MULTIPLE MOTORIZED DRAPERIES:

For rooms that include multiple draperies on one remote, it is important to install them in order, left to right, starting with drapery #1 and continuing in numerical order. Each drapery is labeled with the number indicating its placement in the room it belongs in. The numbers on the shades correspond with the channel to which they are programmed on your remote.

DRAPERIES WITH UNDERTREATMENTS:

Draperies with undertreatments require a separate track for the undertreatment. In this type of installation, the undertreatment motor (kid) is plugged in to the drapery motor (parent) but has its own power supply plug in. See step #3 of the instructions.

The remote control for a motorized drapery with an undertreatment will be a two channel remote control. The first channel will control the main drapery, and the second channel will control the undertreatment.

Trouble Shooting Guide


ISSUE	POSSIBLE CAUSE	SOLUTION/REPAIR
The motor will not operate.	1. No power	Check the power supply, be sure the A/C is plugged in or the switch is on (if hard wired)
	2. No battery in remote control or the battery in the remote control is discharged.	Insert (or replace) the battery in the remote control.
	3. The infra-red transmitter eye on the motor has interference (something is blocking it from receiving the signal from the remote control)	Adjust the receiver eye so that nothing is blocking it.
	4. Defective or damaged remote or motor	Contact your dealer.
The motor runs but the drapery will not open or close	1. The motor is not connected properly	Remove the motor and reconnect it according to the installation instructions on page 3.
	2. The lead carrier is not attached to the drapery	Attach the lead carrier using the drapery hooks.

Continued on Page 8

Installation (continued)

Step 3: Install Motor (continued)


Slide the under cover of the parent motor to expose the female modular connecting ports. Plug the connecting wire from the kid motor into port #2 of the parent motor. The wires can be routed through the retention clips on the side of the motors. Slide the under cover back into place.

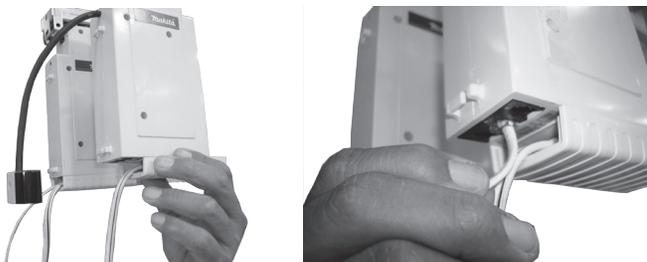

Step 4: Install Drapery

Insert the drapery pins into the carriers on the track, starting with the non-motor end. On the motor end, attach the material directly to the motor using the drapery pins as shown.

For motorized draperies with a motorized undertreatment, the undertreatment is installed in the back track in the same way as the main drapery.

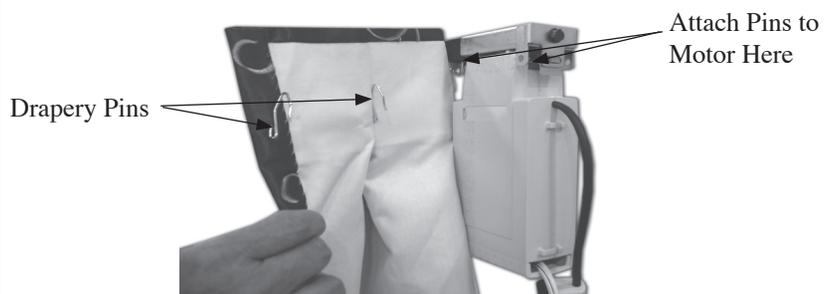

Step 5: Dress, steam and band as necessary.

Note: It is normal for pleated draperies to be banded by the installer to create even folds in the fabric. These bands may remain on the drapery for several days. The banding process will train the pleats to fold properly when the drapery is opened or closed.

Connect the Power

Plug the motorized drapery into any standard wall outlet. Be sure the cord is tucked behind the drapery.

An qualified electrician can hard wire the unit if desired.



Operation: Remote Control

IMPORTANT NOTE:

Your infra-red remote control needs to be pointed at the electronic eye on the motor to operate.

DRAPERY REMOTE NUMBERS

The numbers on the remote correspond to the numbers on the drapery as they were installed, left to right.

OPEN DRAPERY BUTTONS

To OPEN the drapery, press the OPEN DRAPERY button.

Release when the drapery starts to open.



CLOSE DRAPERY BUTTONS

To CLOSE the drapery, press the CLOSE DRAPERY button.

Release when the drapery starts to lower.

STOP DRAPERY BUTTONS

To STOP the drapery from moving, press one of the STOP drapery buttons.

Release when the drapery stops moving.

Operation: Manual Control

Your motorized Averté allows for manual operation in addition to powered operation. Operate your Averté manually using the wood lead rail.

Installation

Please read the important installation notes on page 2 before proceeding.

Step 1: Mount Brackets

Height: Position the top of the brackets allowing for clearance at the bottom of the drapery.

Width: The two end brackets should be 4" from each end. On the motor end install an extra bracket 3" in from the end bracket. This will provide extra support for the motor. Install the remaining brackets in evenly spaced increments of 24" or less. Care should be taken to ensure all brackets are level.


If a motorized drapery with a motorized undertreatment is to be installed, extended brackets with two sets of track clips are used.

Step 2: Install Track

Snap the track into the brackets. Insert the front of the track first then press upward. Repeat with both tracks if installing a motorized drapery with a motorized undertreatment. The undertreatment track must be installed in the back set of clips, and the main drapery track needs to be installed in the front set of clips.

Step 3: Install Motor

Insert the motor head into the pulley shaft as shown in diagram A. Rotate the motor to lock it into place.

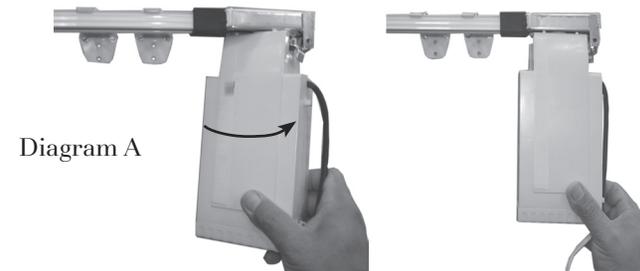

For draperies with an undertreatment, install the second motor for the undertreatment into the back track then connect the undertreatment motor to the main motor.