



Read First

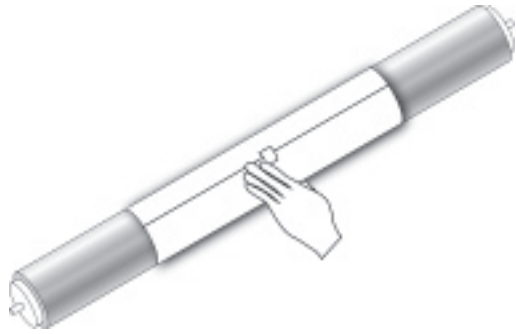


Your new Shades of Elegance™ roller shades or back shades of the Twin Shades are wrapped at the factory with two layers of paper and pre-installed into the roller shade brackets. The final inner paper wrap around the center of the shade is to protect the shade from damage and finger prints during installation. Do not remove the wrap until the twin shade is fully installed up in the window.

OM Installation

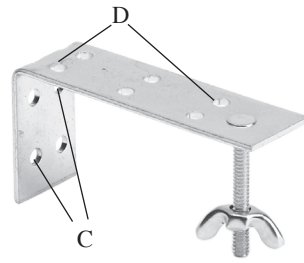

- 1. MOUNT BRACKETS :**
The Extended “New York” brackets can be used either for an inside or outside mount application. Mount the brackets using the holes “C” for outside mounts or holes “D” for inside mounts. Screws provided are appropriate for wood installations, or use your own fasteners.
- 2. PUT UP SHADES:**
Remove the wing nuts from the Extended “New York” brackets and slide the shade into position by sliding the shafts of the brackets into the slots cut into the top of the headrail.
- 3. SECURE SHADE:**
While holding up the shade, reattach the wing nuts to the “New York” brackets and tighten.
- 4. REMOVE WRAP:**
It is now safe to remove the roller shade wrap from the shade.

IM Installation

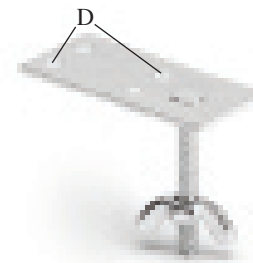


- 1. MOUNT BRACKETS :**
The Footless “New York” brackets is used for an inside mount application. Mount the brackets using the holes “D” for inside mounts. Screws provided are appropriate for wood installations, or use your own fasteners.
- 2. PUT UP SHADES:**
Remove the wing nuts from the Footless “New York” brackets and slide the shade into position by sliding the shafts of the brackets into the slots cut into the top of the headrail.
- 3. SECURE SHADE:**
While holding up the shade, reattach the wing nuts to the “New York” brackets and tighten.
- 4. REMOVE WRAP:**
It is now safe to remove the roller shade wrap from the shade.

Upright™ Shades

IMPORTANT

In compliance with national safety regulations shades will not operate unless the cord tensioner is installed correctly! After the shade is installed, the cord tensioner must be secured to the wall.

1. Locate the tensioner as close to the shade as possible without interfering with the shade.
2. Make sure the screw hole (A) on the cord tensioner is pulled half way down before mounting. This will ensure the cord can move freely through the cord tensioner.

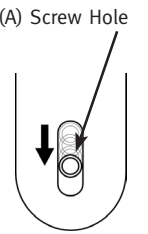


3. For IM installations attach the cord tensioner directly with a screw through the screw hole. For OM installations use the supplied mounting bracket (B).

(B) Mounting Bracket



Break-Through Tassels

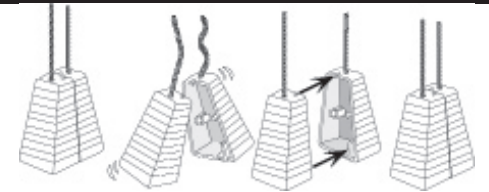

The tassel is designed to break apart to protect children and pets. To reassemble, simply snap halves back together as shown.


To reassemble the four cord tassel, place loose cords in slot in top of tassel halves and snap back together.

Shade Maintenance

Leveling a Crooked Shade

1. Lower the shade until roller is exposed. Do not lower further to avoid the cloth falling off the roller.

2. Stick a 5" strip of masking tape into the roller at opposite side from where it is going crooked. Place as close to edge as possible.

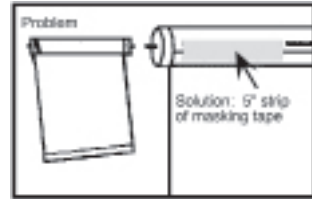

3. Roll up shade. If it is still going crooked:
A. If shade is still crooked to the same side, add another strip of tape on top of the first one to and repeat.
B. If shade is crooked to the opposite end, tear off about 1" from tape and repeat

REMEMBER: After making above correction, your hand is still the best guide to rolling a shade straight. Watch the end of the roller as you roll up shade to see if shade is going even.

Shade Maintenance

Adjusting the Cord Loop (Clutch Only)

The up and down limits on your clutch operated roller shade have been set at the factory, however, if the chain stop on the shade will not allow the shade to raise or lower all the way, an adjustment on the shade will need to be made.

If the shade will not raise all the way up due to the chain stop, take the shade out of the brackets and roll up the shade by hand and replace in brackets. The shade will now raise all the way.

If the shade will not lower all the way down due to the chain stop, take the shade out of the brackets and unroll the shade to the desired position. Place the shade into the brackets. The shade will now lower all the way.

Cleaning Instructions

We suggest periodic vacuuming with a soft brush attachment. Wet cleaning of any shade is highly discouraged, especially those with cotton content.

Warning

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.

- Always keep cords and bead chains out of children's reach.

- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.



- Attach a cord guide to the wall. This can prevent children from pulling cords and bead chains around their necks.

Warranty

B&W Window Fashions warrants that its Horizons products - properly installed in a residential dwelling will be free from defects in materials and workmanship for as long as the original purchaser owns the product. All fabric colors tend to lose their original intensity over time, and pull cords eventually wear out. This is considered normal wear and tear and is not covered by this warranty. Abuse and misuse are not covered. Color lots vary and may not exactly match a previously ordered product. Repair is the purchaser's sole remedy under this guarantee. This warranty does not cover incidental or consequential damages, installation or service calls.

B&W Window Fashions
Waukegan, Illinois

Installation Instructions for

Horizons™
by B&W

Twin Shades



Congratulations on
the purchase of your new
Horizons™ Twin Shades

Horizons™
by B&W