

Dressing the Shade

Steaming the Shade

Like every fabric treatment, a brand new Horizons window fashion right out of the box may have wrinkles.



Many of the wrinkles will simply hang out after a few days. However, for best results, we recommend steaming your shade once it is installed.

If a professional steamer is unavailable, a standard iron with a steam button will work just as well.

Dressing the Shade

Part of the beauty of a fabric shade is the folding of the pleats. Often, a pleat on a new shade will fold in an unusual way.

Once the shade is raised, a little dressing of the pleats (pulling them into the desired position) may be necessary.

The shade will gradually develop a memory for how the pleats should hang, and little or no dressing will eventually be needed.



Upright™ Shades

IMPORTANT

In compliance with national safety regulations, shades will not operate unless the cord tensioner is installed correctly! After the shade is installed, the cord tensioner must be secured to the wall.



1. Allow the tensioner to hang free and use it to position the clear plastic mounting bases.
2. Using the two long screws attach the mounting base to the wall.
3. Using the small screw, loosely install the cord tensioner (figure A).
4. Pull the tensioner upwards until the small screw is aligned at or below the indicator line (figure B). Finish tightening the small screw.

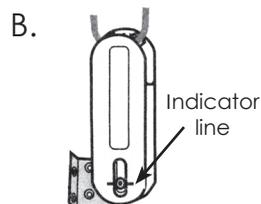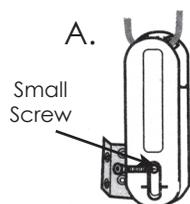

Care and Cleaning

It is recommended that Vitalé Roman Shades be vacuumed periodically with a drapery hose attachment.

Professional cleaning is recommended for all Fabric Roman Shades. A professional drapery cleaner may be found in the yellow pages or on the internet.

Warning

Young children can STRANGLE in cord and bead chain loops. They can also wrap cords around their necks and STRANGLE.



- Always keep cords and bead chains out of children's reach.
- Move cribs, playpens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.
- Do not tie cords together. Make sure cords do not twist together and create a loop.
- Attach the cord tension device to wall or floor. This can prevent children from pulling cords and bead chains around their necks.
- Do not remove looped cord from cord shroud.

Limited Lifetime Guarantee

B&W Window Fashions warrants that its Horizons products, properly installed in a residential dwelling, will be free from defects in materials and workmanship for as long as the original purchaser owns the product.

All fabric colors tend to lose their original intensity over time. This is considered normal wear and tear and is not covered by this guarantee. Abuse and misuse are not covered. Color lots vary and may not exactly match a previously ordered product. Repair is the purchaser's sole remedy under this guarantee.

This guarantee does not cover incidental or consequential damages, freight, installation or service calls (trip charges).

Installation Instructions for

Horizons™
by B&W

Vitalé™ Fabric Roman Shades



Featuring

cordless
ONE
controls™

Congratulations on
the purchase of your new Horizons™
Vitalé Fabric Roman Shade!


Horizons™
by B&W

New York Bracket Installation

New York Brackets are standard for all inside and outside mount installations.

1. Prepare the Headrail:

The headrail of your shade has been slotted for New York brackets before being wrapped with fabric.




The number of notches is equal to the number of New York brackets.


Shade Width	# of Brackets
0" - 48"	2
48" - 84"	3
84" - 96"	4

2. Install The Brackets:

Install the New York Brackets in the window to line up with the slots in the headrail. Make sure all the brackets are level with each other.

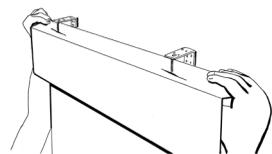


Remove the wing nuts from the "New York" brackets and slide the shade into position by sliding the shafts of the brackets into the slots cut into the top of the headrail.

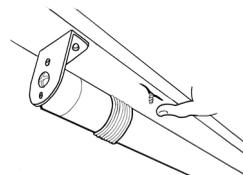

3. Secure the Shade:

While holding up the shade, reattach the wing nuts to the "New York" brackets and tighten.

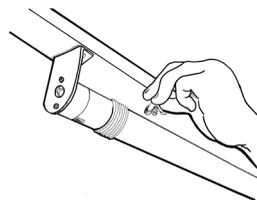


Note: Extended New York Brackets are available for outside mounted shades and project the shade out an extra 3/4"

"L" Brackets Installation (Waterfall Only)

"L" Brackets are an alternative outside mount bracket; not recommended for shades with a 6" classic valance. (Waterfall Only)

1. Install the Brackets:


Make sure all the brackets are level. One bracket should be mounted 5" from each end of the shade. Intermediate brackets should be spaced evenly in between. Use the correct number of brackets.

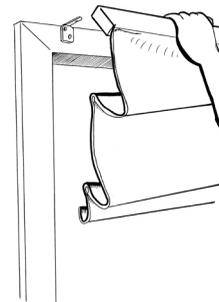

Shade Width	# of Brackets
0" - 48"	2
48" - 84"	3
84" - 96"	4

2. Secure the Shade:

Place the headrail on top of the mounted "L" brackets and then secure the shade to the brackets using the provided 3/4" screws.

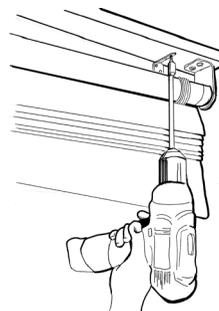


2" Screws Installation (IM Only)

2" screws are a quick and easy alternative inside mount installation method.

1. Insert the Mounting Screws:


With the shade down, insert the mounting screws from the bottom side of the headrail. One screw should be mounted 5" from each end of the shade. Intermediate screws should be spaced evenly in between. Use the correct number of screws.

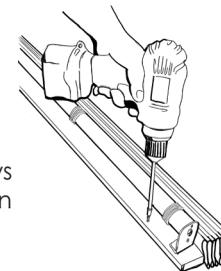

Shade Width	# of Screws
0" - 48"	2
48" - 84"	3
84" - 96"	4

2. Position the Shade:

Hold the shades up and position it in the window opening. Drive the mounting screws up through the headrail into the inside of the window opening, soffit, or ceiling.

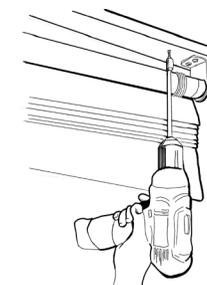

Cordless ONE Controls™

To Raise the Shade

Give the ring a gentle downward pull and guide the shade straight up assisted by the spring pull mechanism.



To Lower the Shade

Pull the ring straight down and pause to set the shade at the desired height.




Adjusting Spring Tension

When adjusting the tension on a shade with a valance, work from the FRONT of the shade. When adjusting a Waterfall shade, work from the BACK of the shade.


To Increase Tension

Grasp the tube with the right hand making sure it does not rotate. With your left hand, turn the white ribbed wheel in the direction of the arrow (shown in Figure A) one full turn. Test the shade. Repeat if necessary.

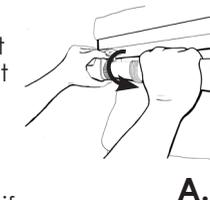

To Decrease Tension

Grasp the tube with right hand and rotate 1/4 turn in the direction of the arrow (shown in Figure B) to unlock the spring. With your left hand, turn the white ribbed wheel one full turn in the same direction. Test the shade. Repeat if necessary.

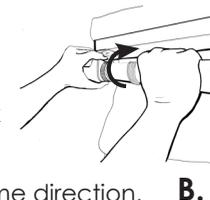

Releasing Shade

If the Shade is stuck in the Down Position

Grasp the white ribbed wheel and turn in the direction of the arrow (shown in Figure C) 1/4 turn. **Do not grasp the tube.** This will realign the stop mechanism to the correct position. If additional adjustment is needed, turn the ribbed wheel an additional 1/8 of a turn.

